

# MASTERBUILT®

## Grill Body Instruction Sheet


### Gravity Fed Grill CGP24G1D



**CAUTION**




- Always remove plug from outlet before servicing your grill.
- Make sure your grill has fully cooled to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.

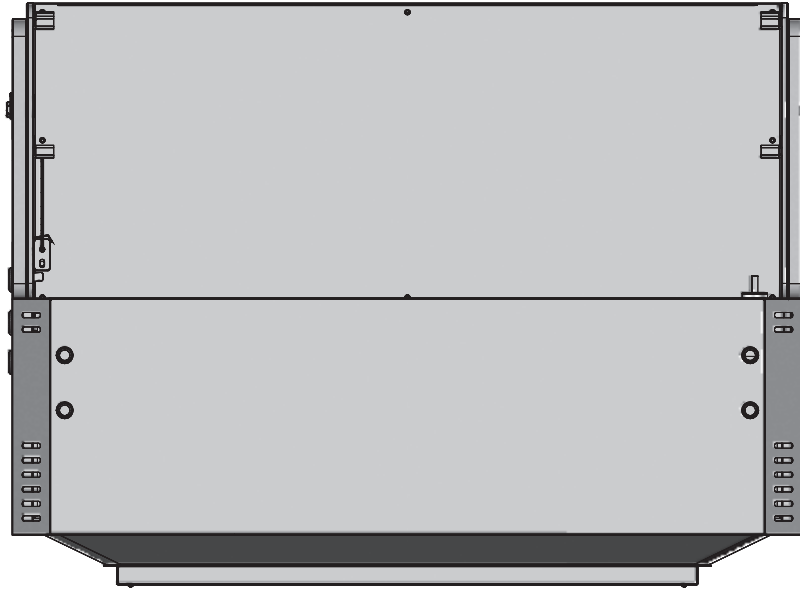

**Remove: grates/griddle, warming racks, manifold, charcoal from hopper, ash grate, ash can, grease tray, slides, hopper ash door, any other accessories on the grill.**

### Disassembly

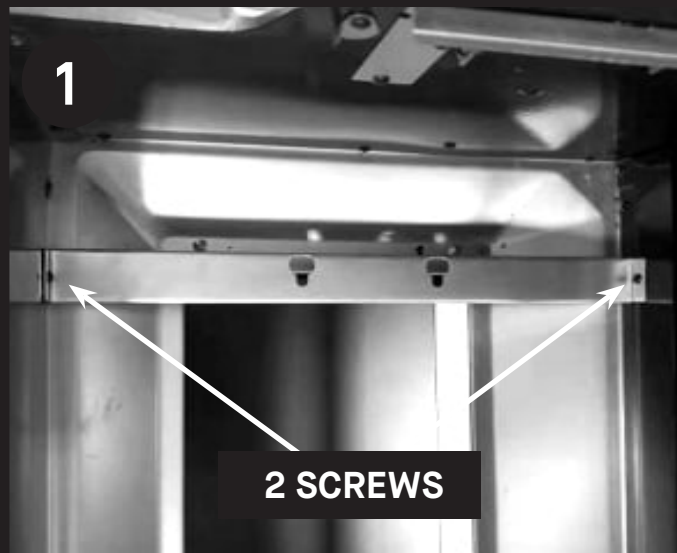

Remove the manifold support bracket (2 screws)



Remove front folding shelf (4 screws)


# Disassembly




Unplug wires from the controller.




Remove side shelf (4 screws)

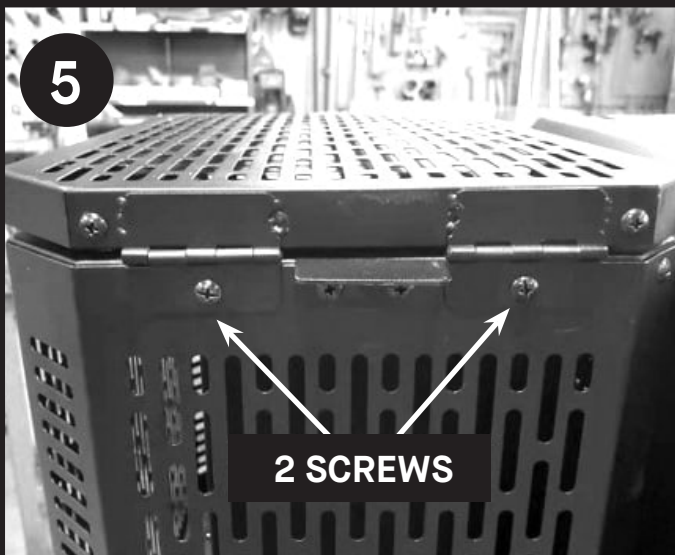


Remove hopper lid (2 screws)

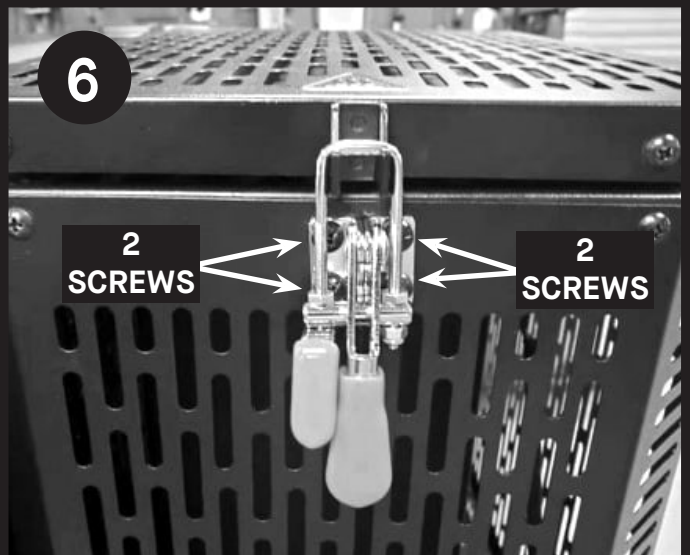

Remove hopper latch (4 screws)

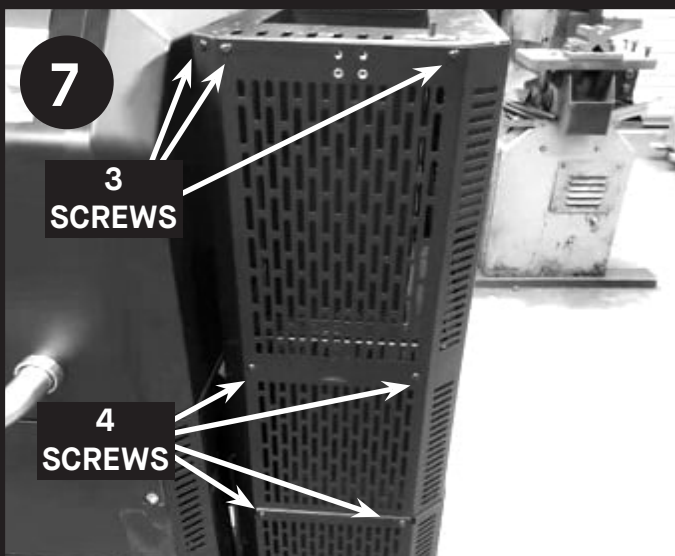


Remove shroud (7 screws)

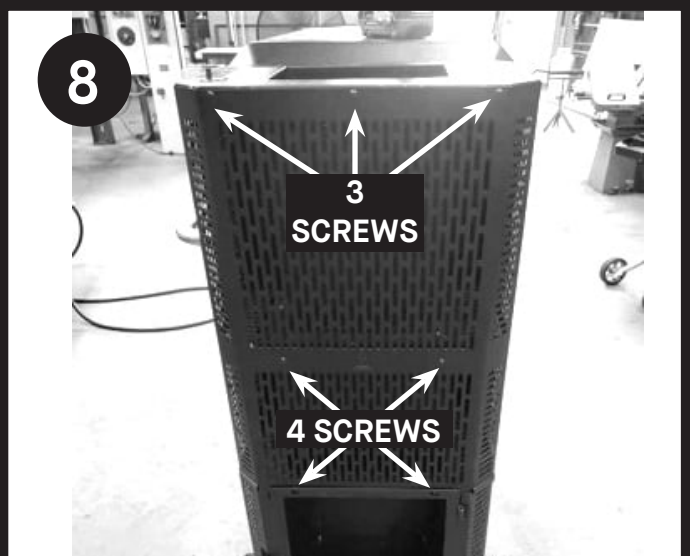


Remove shroud (7 screws)

# Disassembly

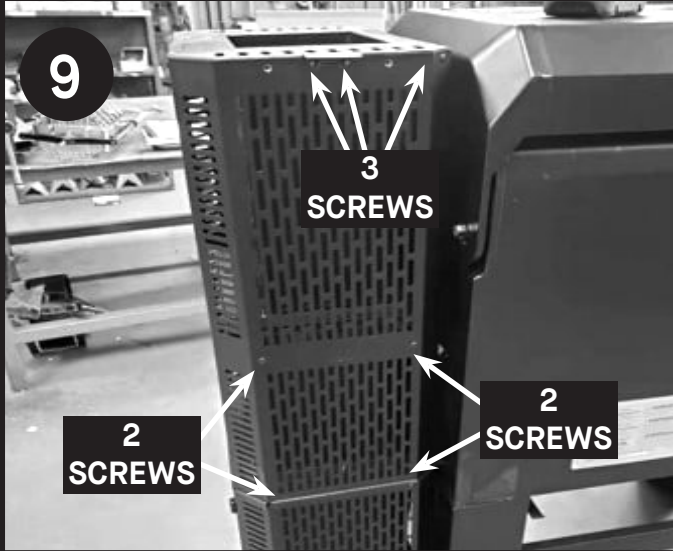


Remove shroud (7 screws)

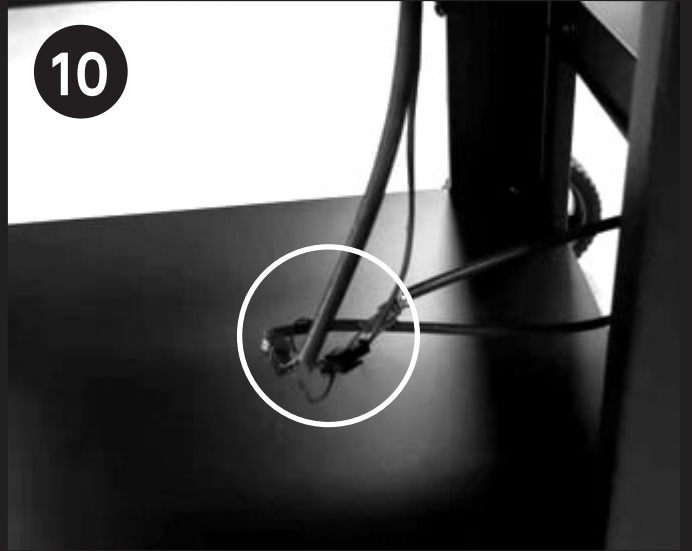

Unplug the wiring harness.




Pull the hopper wires through the leg brace hole.

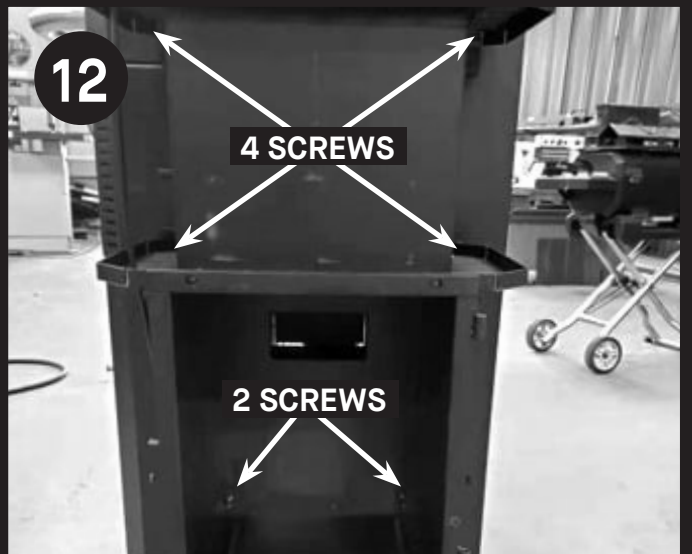

Remove hopper (6 screws). Pull the hopper off the body and set to the side.




Turn the grill upside down on the lid.

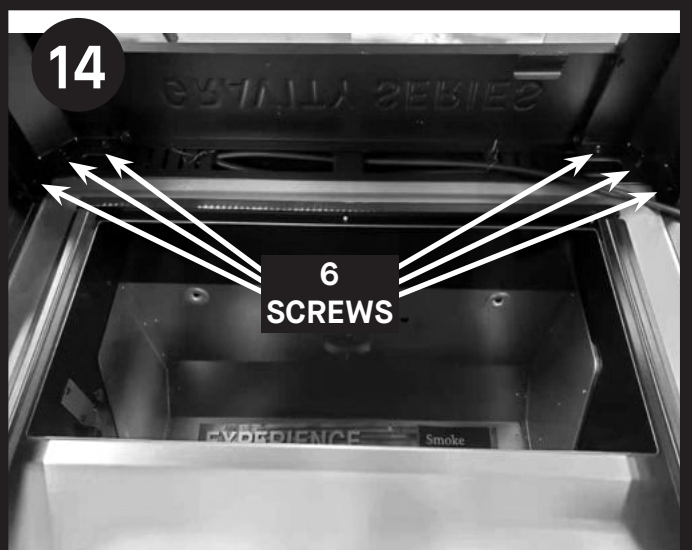


Remove 6 screws from the legs.


## Disassembly

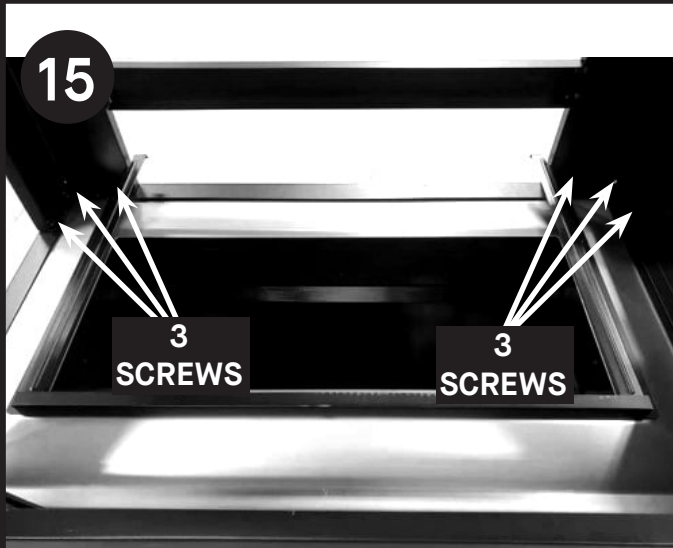

Remove 6 screws from the legs.

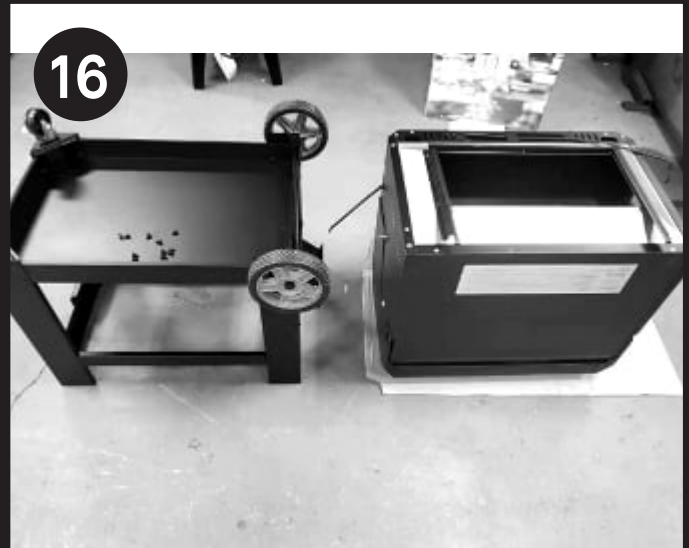

Take the legs off the body.

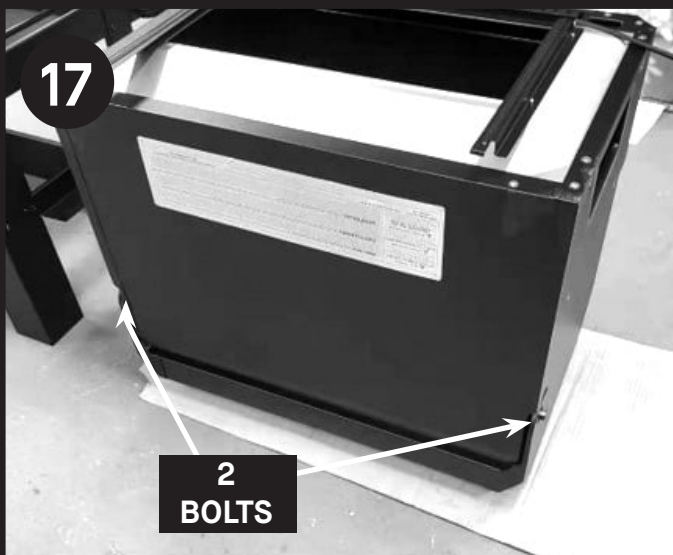

Remove 2 bolts that hold the lid to the body.



Remove the body from the lid.

## Assembly

1. Screw the lid onto the body (see step 18).
2. Screw in the leg assembly to the new grill body (see steps 14 and 15).
3. Screw in the hopper to the grill's body using six (6) screws (see step 12).
4. Plug the wiring together (see steps 10 and 11).
5. Screw in the heat shield to the hopper using twenty one (21) screws (see steps 7, 8, and 9).
5. Attach the hopper lid and latch using six screws (6) (see steps 5 and 6).
7. Attach the side shelf using four screws (4) (see step 4).
8. Plug in wires to the controller (see step 3).
9. Attach the front folding shelf using 4 screws (4) (see step 2).
10. Replace the manifold support bracket using 2 screws (2) (see step 1).
11. Replace: grates/griddle, warming racks, manifold, charcoal from hopper, ash grate, ash can, grease tray, slides, hopper ash door, any other accessories on the grill.

@masterbuilt



masterbuilt.com

Customer Service: [masterbuilt.com/contact-us](http://masterbuilt.com/contact-us) • [masterbuilt.com/warranty](http://masterbuilt.com/warranty) • [masterbuilt.com/collections/parts](http://masterbuilt.com/collections/parts)