

MASTERBUILT®

Upper Door Instruction Sheet


Digital Charcoal Smoker CS40G1DW




CAUTION



- Always remove plug from outlet before servicing your smoker.
- Make sure your smoker has fully cooled to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.

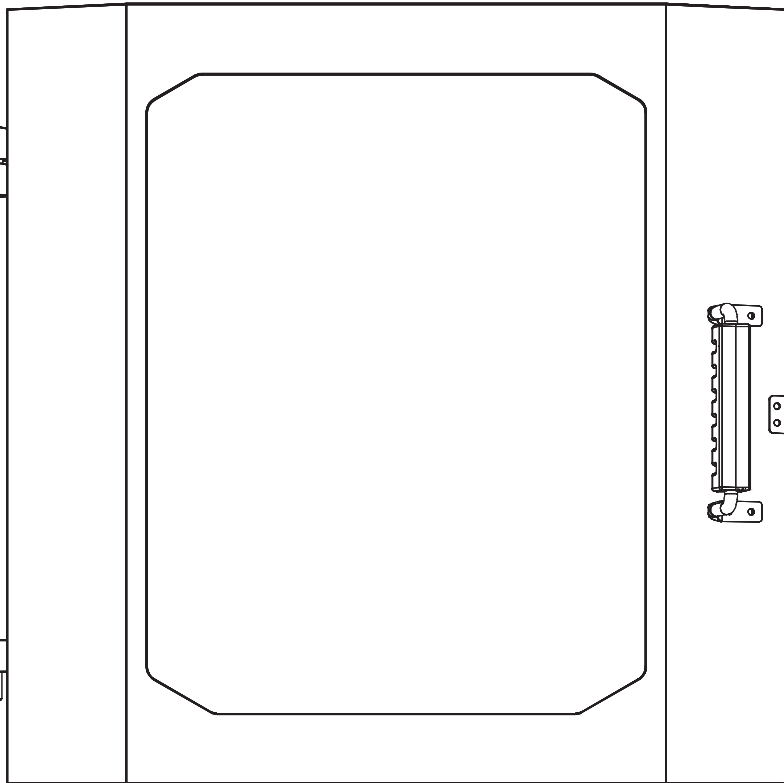

1

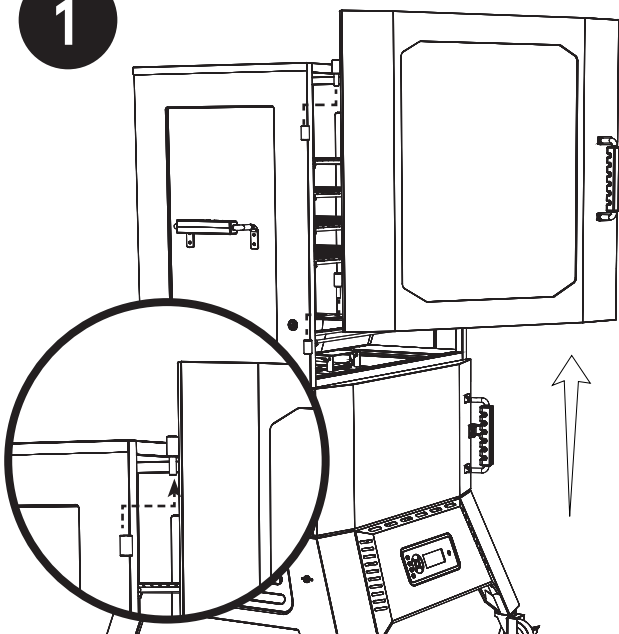

2

