

MASTERBUILT®

Lid Lock Instruction Sheet

Portable Grill CGT18G1A



- Always remove plug from outlet before servicing your grill.
- Make sure your grill has fully cooled to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.

<p>1</p>	<p>2</p>	<p>3</p>
<p>Remove the cooking grate, manifold, and charcoal hopper.</p>	<p>Remove the body liner. Rotate the liner to sit on the left shelf.</p>	<p>Remove the (4) screws holding the lid lock.</p>
<p>4</p>	<p>5</p>	<p>6</p>
<p>Remove the lid lock.</p>	<p>Install the new lid lock.</p>	<p>Replace the body liner, charcoal hopper, manifold, and cooking grate.</p>