

MASTERBUILT®

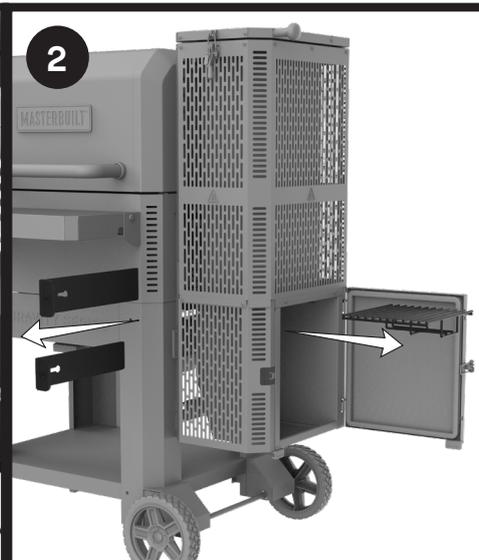
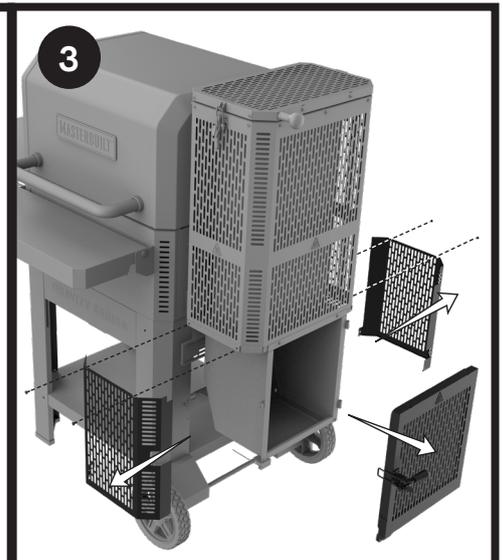
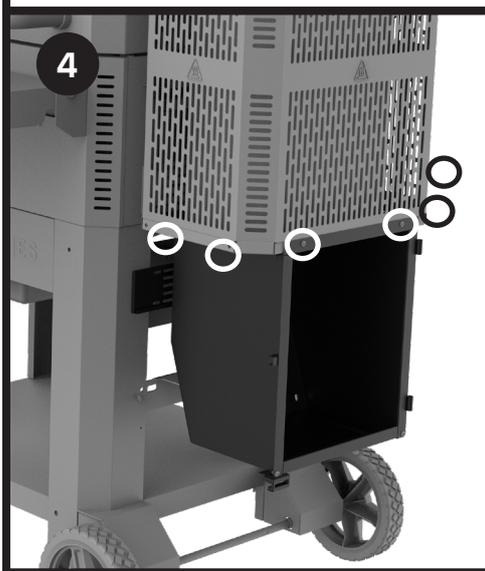
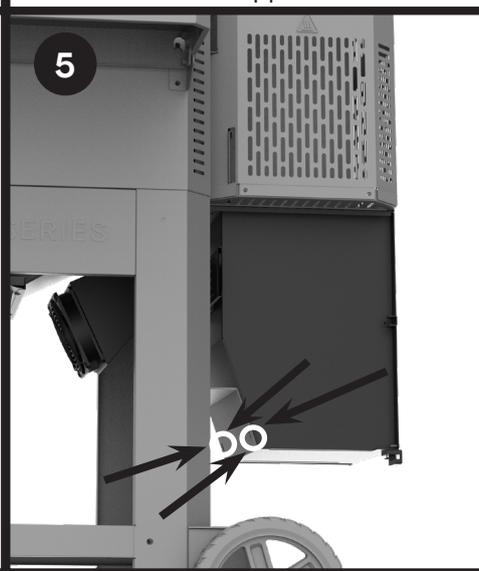
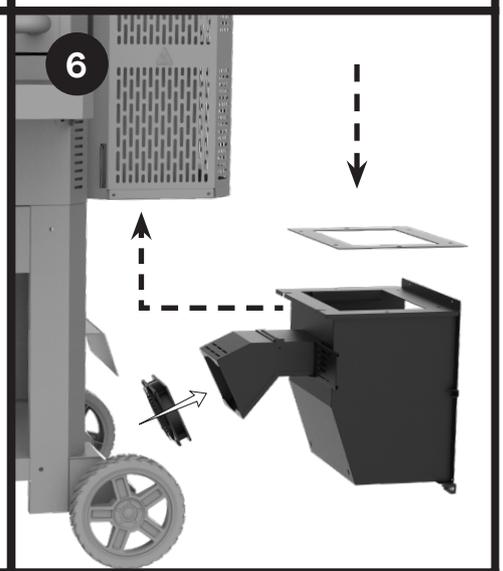
Bottom Hopper Replacement, 2 Piece Hopper, Gravity Series (G2)



CAUTION

- Always remove plug from outlet before servicing your grill.
- Make sure your grill has fully cooled to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.

Note: Your grill may vary from images shown

		
<p>1 Remove the fan from the lower housing, you will reuse.</p>	<p>2 Remove the shutdown slides, charcoal grate and remove all charcoal from the hopper.</p>	<p>3 Remove the bottom hopper shroud and hopper door.</p>
		
<p>4 Remove the 6 screws from the bottom of the hopper plate.</p>	<p>5 Remove the 2 screws and nuts from lower hopper mounting bracket.</p>	<p>6 Replace hopper. Replace the gaskets. Replace the fan. Reconnect wires.</p>

For reinstallation, follow all steps in reverse.