

KJ15041123/KJ15041523

**KAMADOJOE®**

# Konnected Joe™ Stainless Steel Firebowl




## CAUTION - SAFETY PRECAUTIONS - READ BEFORE USE




- Make sure your grill has fully cooled before handling to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.
- Disconnect the power supply from the grill before handling.




Remove all internal components of the grill. Cooking grates, x rack, heat deflectors, SS ring, ceramic firebowl panels, charcoal grate, element.

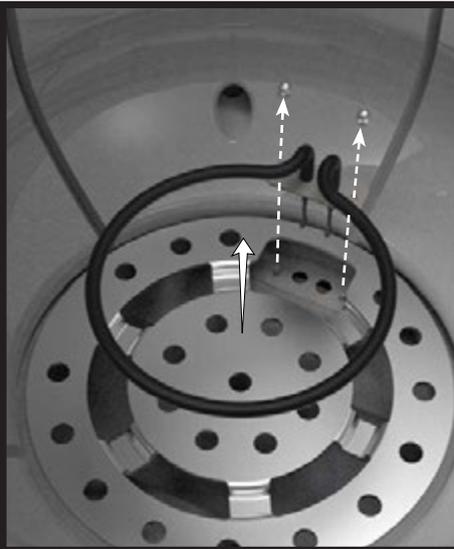

Remove the 2 acorn nuts from the element mounting plate. Then, with extreme caution, lift the element straight up and out of the grill. (NOTE - you may need to lightly hold down the element bracket to remove the element from the bracket).

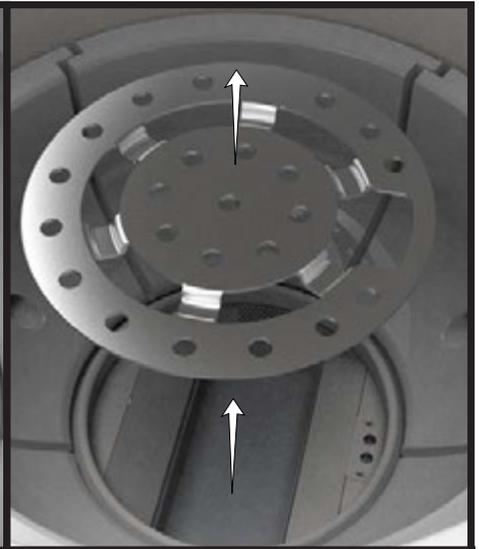

Remove the charcoal grate from the grill

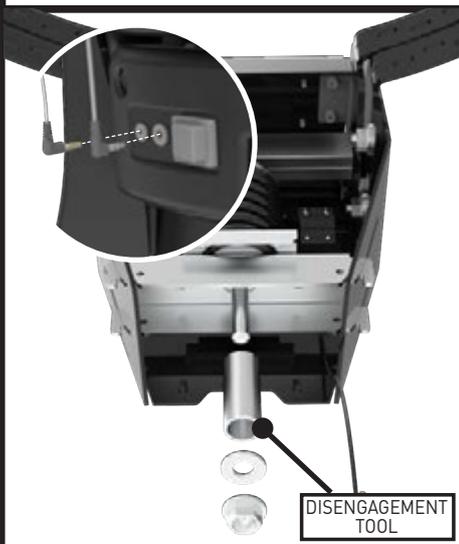

DISENGAGEMENT TOOL

Install the disengagement tool on the hinge. Unplug pit probe, lid switch, and power supply from rear of grill.



Remove 12 hinge acorn nuts.  
Remove the hinge.  
Remove the lid and set aside.



Remove the set screw from the inside of the grill (front).  
Remove the set screw from the outside of the grill (rear).



Remove the three wire harness cover screws.



Remove the wire harness cover.




Unplug the element from the wire harness. The element wire can be identified with the yellow and white wire.



Remove the ceramic ring from the grill.




Remove the stainless steel firebowl from the grill.

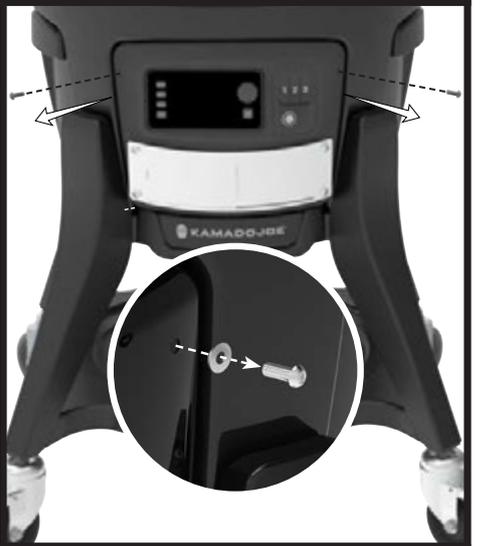

Remove two screws from front module.



Remove front module and set aside.

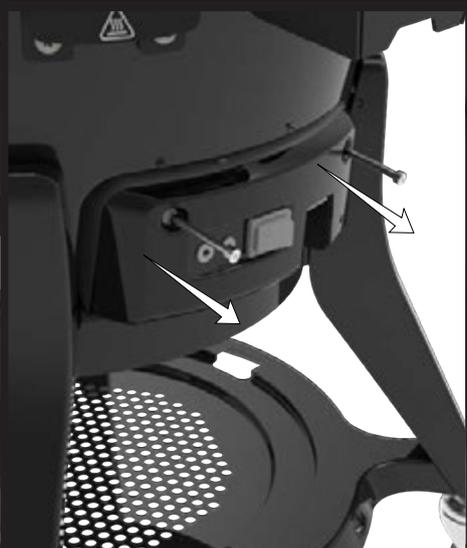


Loosen two screws from rear module. Please note, the screws do not have to be fully removed to disengage the rear module.



Remove rear module and set aside.




Remove the front insulation.

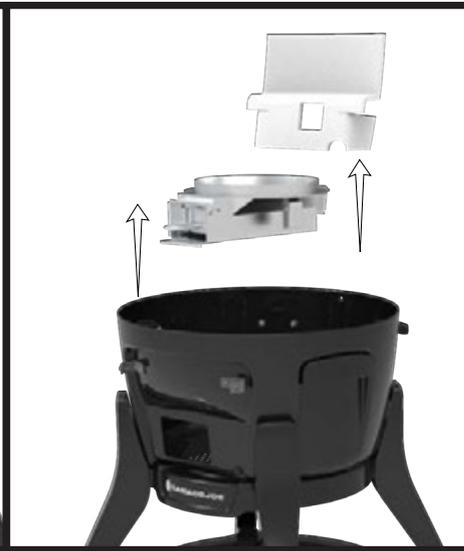

Remove ash drawer assembly and rear insulation. Note - the rear insulation is secured with the ash drawer assembly.



FRONT FLANGE

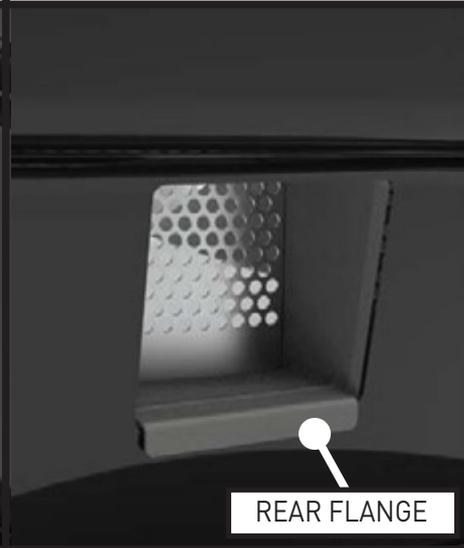

REAR FLANGE

Repeat the steps in reverse order to install the new stainless steel firebowl kit.  
NOTE - when installing the new ash drawer assembly, make sure the flanges go through the front and rear of the grill body.

# **KAMADOJOE®**